


URBAN SERIES | CHANNEL DRAIN ASSEMBLY



1. Check all components

- 1 x Channel Base
- 1 x Spigot
- 1 x Grate
- 1 x Pack of Adhesive
- 2 x End Caps
- 1 x Tube of Silicone
- 1 x Outlet Plate

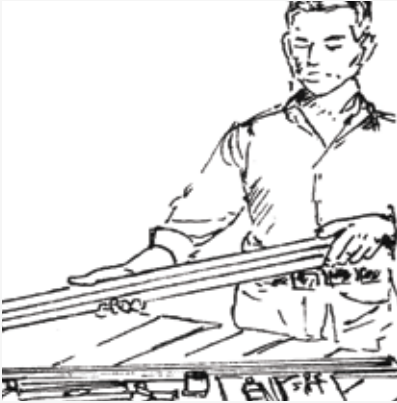

2. Measure and mark length of drain

- Trough . Length - 10mm
- Outlet . Length from end - 5mm
- Grate . Length - 12mm



3. Cut the drain to length

- Use safety glasses and ear plugs.
- Cut the trough and grate.
- Use an angle grinder and fine metal cutting disc.



4. Drill the outlet

- Place trough on a piece of timber.
- Use a metal hole saw to drill the outlet.



5. File sharp edges

- File cut edge of the trough, outlet and grate.
- Use sandpaper to finish them smooth.



6. Fit end caps

- Apply epoxy glue to both ends of the trough.
- Fit end caps to each end.
- Use an angle grinder and fine metal cutting disc.



7. Fit spigot outlet

- Mix epoxy glue, spread on plate and flange.
- Fix plate over hole and push spigot onto the flange



8. Fit grate

- Allow glue to dry for 15 minutes.
- Turn trough over and fit grate.
- Drain is now ready to install.